



Slim Bracket Installation Guide


- **DO NOT PAINT, WELD, OR MODIFY** the Slim Bracket in any way.
- **Keep at least 3/4 INCH CLEARANCE AROUND ALL SIDES.**
- **There must be a clear, unobstructed view of the sky from the Slim Bracket.**
- **No metal, carbon fiber, or fiberglass panels may cover the Rally Logger.**

SPECIAL NOTE

Motorcycles & Quads must mount the Slim Bracket on the rear fender.

- Slim Bracket must be installed securely to the vehicle so it cannot be removed when the Rally Logger is installed.
- The 4 corner holes in the Slim Bracket may be drilled to match rivet or screw size.
- Mount the Slim Bracket as far as possible from any other antennas or electronics that may receive or cause interference. This is especially true for other GPS and/or satellite antennas (minimum 12 inches), fuel pumps, ignition boxes, coils, computer boxes, electric fans, etc.
- Maintain adequate distance from high heat sources (exhaust, oil line, radiator, water hose, etc.)
- The ideal location for 4-Wheel Vehicles is just behind and below the rear edge of the roof area.
- The required location for motorcycles and quads is on the rear fender area; other locations are subject to approval by the race organization.
- The Slim Bracket must be mounted in an easily accessible location.
- Placement should be in a protected area that cannot be easily damaged by nerfing, tree branches, spilled fluids, excessive heat, etc.
- Orientation
 - "Front" of Slim Bracket must point towards front or side of vehicle
 - Lengthwise, may be tipped up to 45 degrees if necessary
 - Widthwise, should not be tipped at all and remain horizontal

TOP VIEW

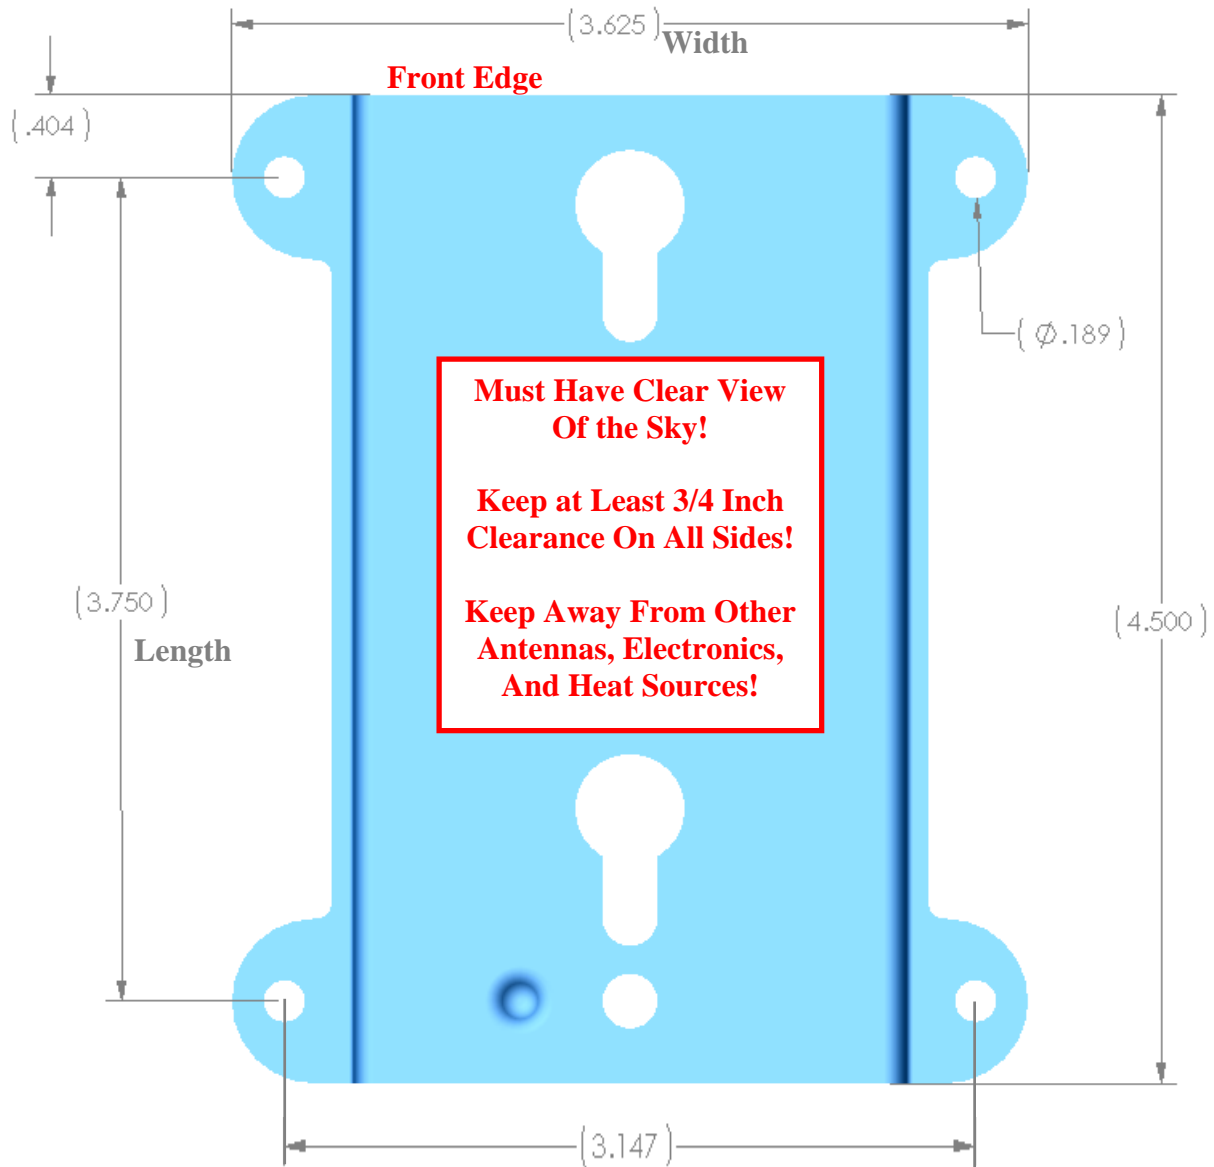

FRONT VIEW

